


ATTENTION: these fittings are designed to engage each other with minimal effort. You will never need any other tools to build your display. **DO NOT** force pieces. If a piece is broken, please contact us for replacement.

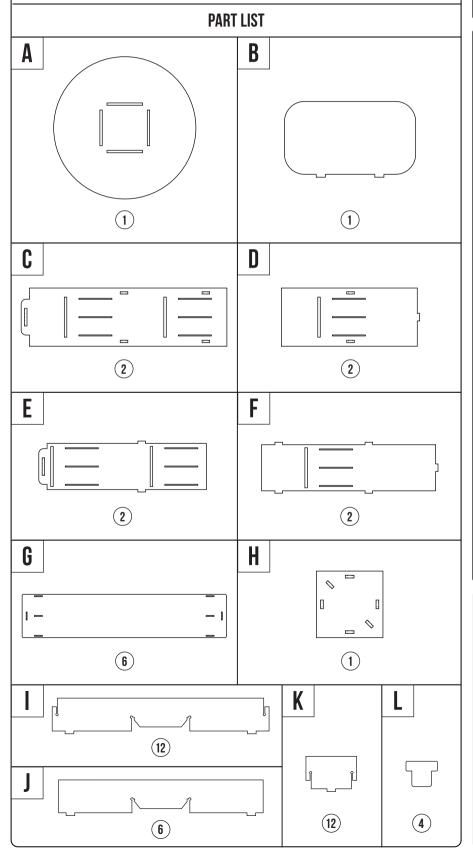

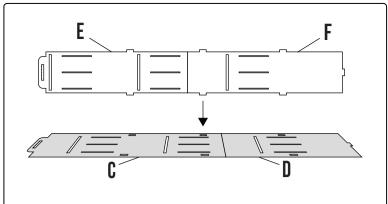

STEP 1: Lay boards C and D flat. Attach both boards E and **F** to board **C** and **D** to both sides.

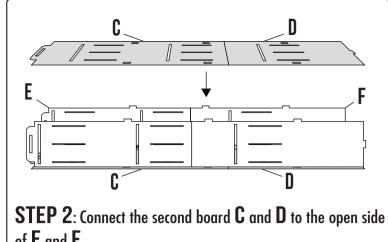


of E and F.


DIS-AD-R-C-GC-24




SCAN OR CODE TO WATCH ASSEMBLY VIDEO OR GO TO TORCHEDDISPLAYS.COM/VIDEOS

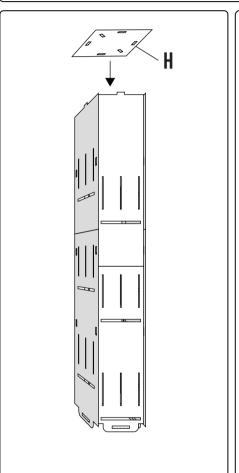


STEP 3: Connect board H to top of boards D and F.

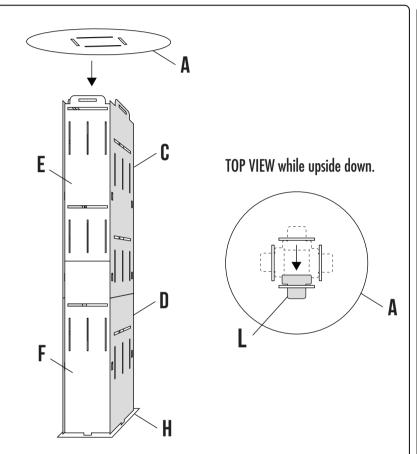

STEP 4: Turn tower upside down and connect rotating board A to boards E and C. Insert board pegs L to secure rotating board **A** to boards **E** and **C** (only 2 are needed).

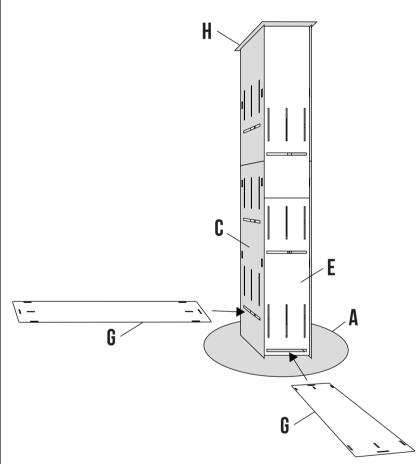


  ${f STEP}$  5: Turn tower right side up and insert board  ${f G}$  through slids in board **E** starting from the bottom. After **STEP 8** insert next board  ${\bf G}$  into  ${\bf C}$  starting from the bottom.




**STEP 6**: Remove film from both sides of the acrylic boards I, J and K.

TIP: Rubbing 2 films against each other will help lift the film.

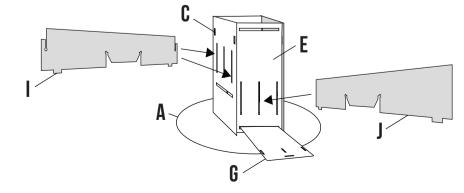

**STEP 7**: Insert acrylic boards **I** into the 2 outside vertical slits on board **C**. Optional: Insert acrylic board **J** into middle slits of shelves.

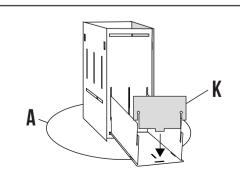

**STEP 8**: Connect acrylic boards **K** into the 2 ends of boards I. Continue building each shelf from bottom up onto boards **C**, **E**, **D** and **F**.