
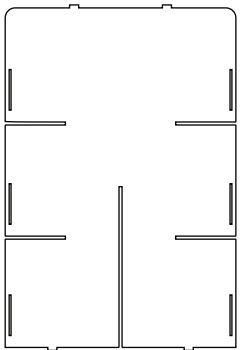
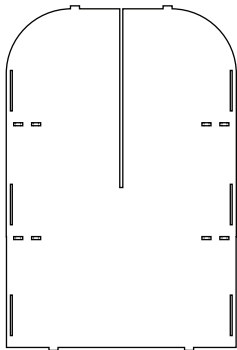
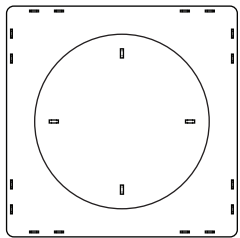
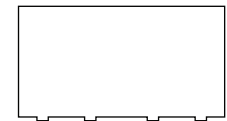
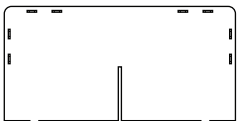
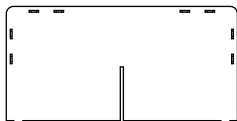






TORCHED DISPLAYS


ATTENTION: these fittings are designed to engage each other with minimal effort. You will never need any other tools to build your display. **DO NOT** force pieces. If a piece is broken, please contact us for replacement.

PART LIST


A  1	B  1
C  1	D  1
E  2	F  2
G  1	H  12

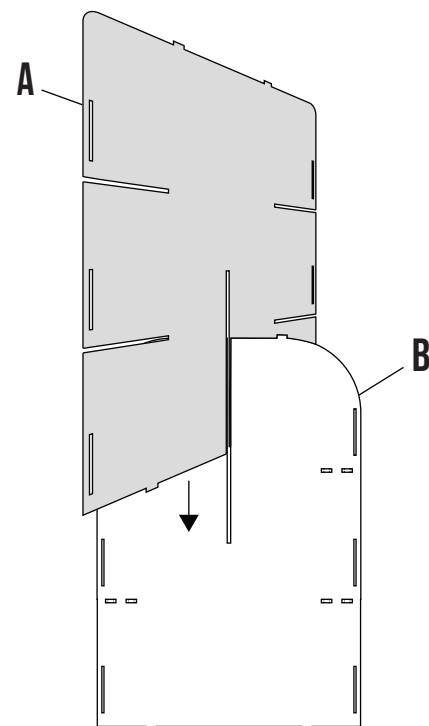


STEP 1: Fit slots of boards **A** into board **B** creating the cross walls for the center.

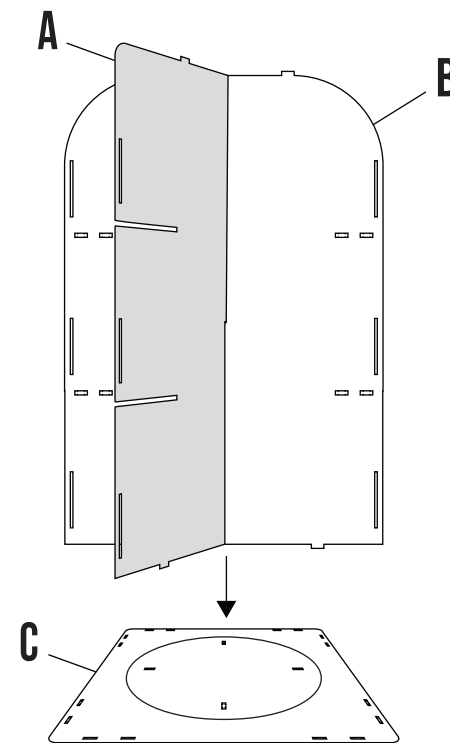


STEP 2: Connect the cross wall (**A+B**) to the bottom board **C**.

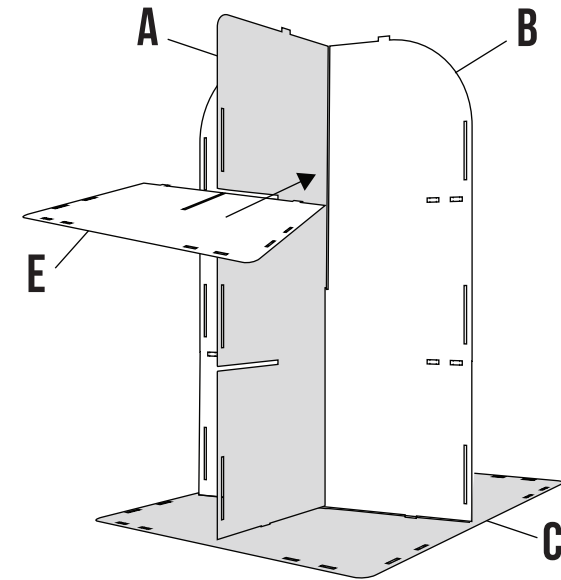


STEP 3: Insert board **E** to interlock with board **A**.

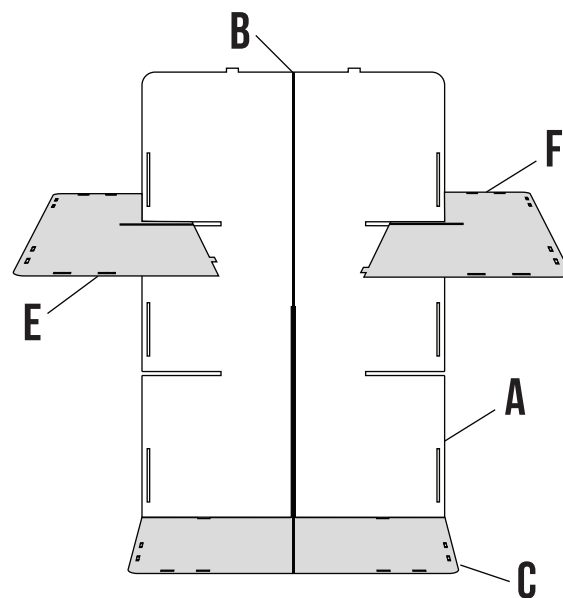

STEP 4: Board **F** goes opposite of board **E** when inserting to interlock to board **A**.

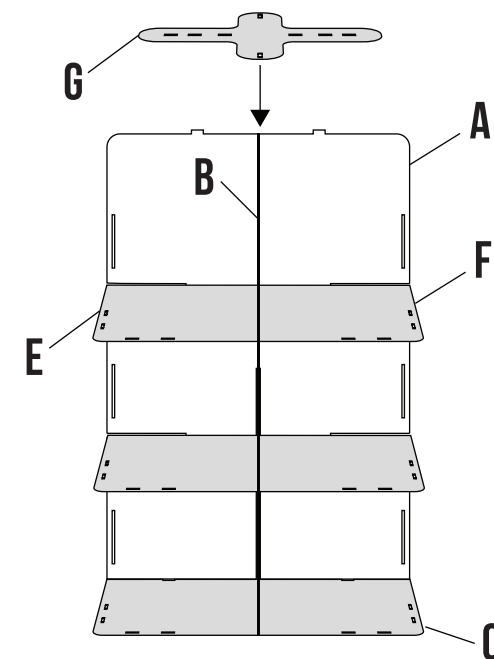

STEP 5: Fit all shelves (**E + F**) into board **A** and connect board **G** to the top center of **A** and **B**.

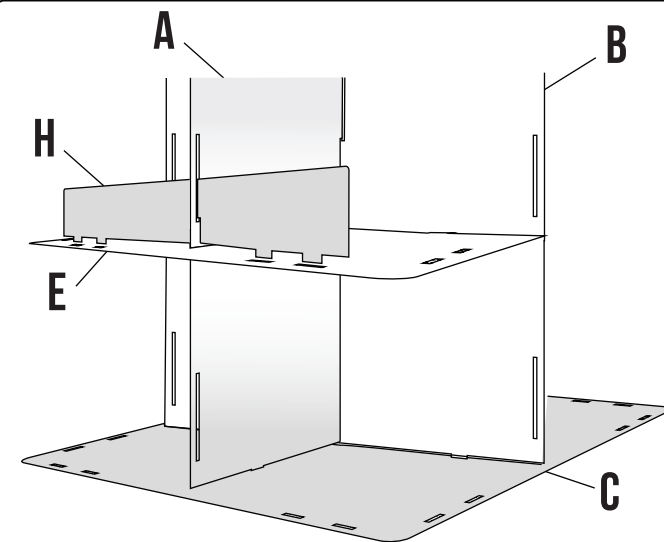


STEP 6: Fit all acrylic boards **H** through slits in boards **A** and **B** and snap into boards **E** and **F**.

DIS-AD-R-C-MULTIBIN



SCAN QR CODE TO WATCH ASSEMBLY VIDEO OR GO TO [TORCHEDDISPLAYS.COM/VIDEOS](https://torcheddisplays.com/videos)

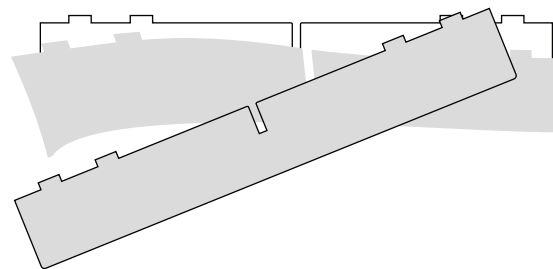

Remove the film from both sides of the acrylic boards **H**.
TIP: Rubbing 2 of the films against each other will help lift the film.

