
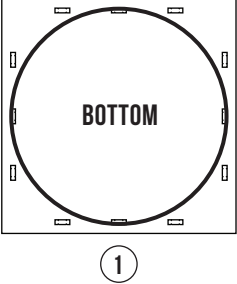
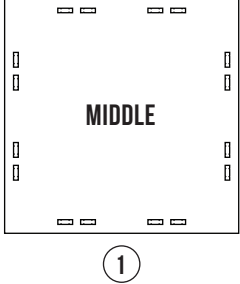
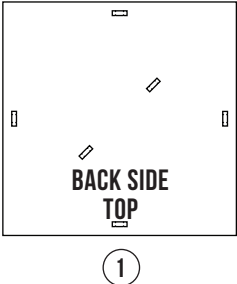
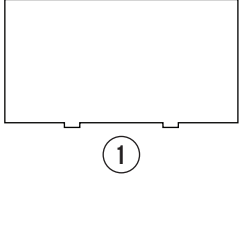
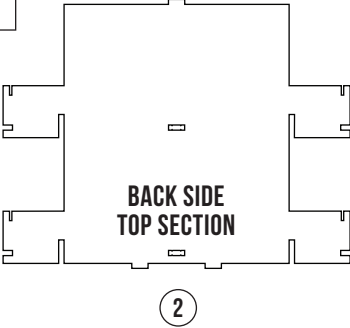
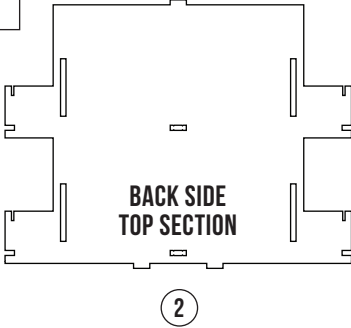
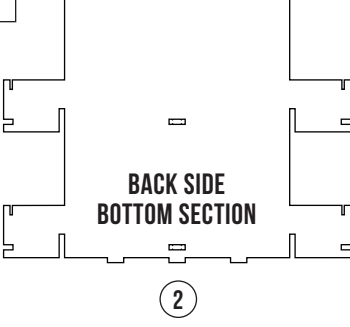
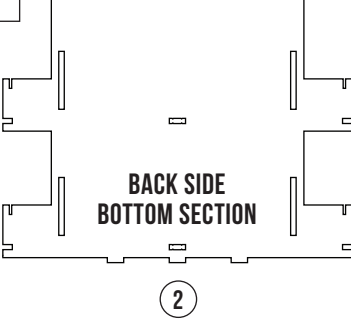






TORCHED DISPLAYS


ATTENTION: these fittings are designed to engage each other with minimal effort. You will never need any other tools to build your display. **DO NOT** force pieces. If a piece is broken, please contact us for replacement.

PART LIST


A 	B 
C 	D 
E 	F 
G 	H 
I 	J 

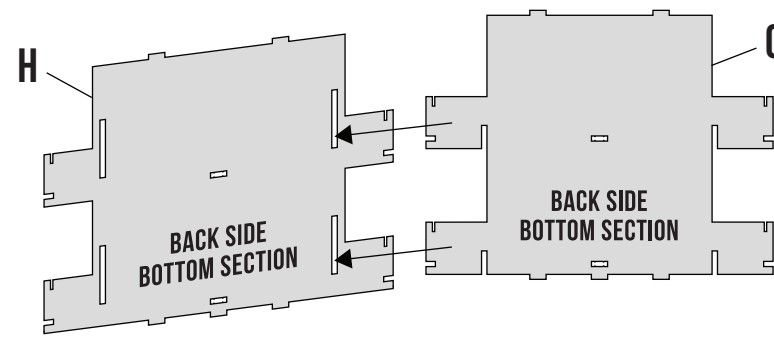


STEP 1: Fit both board **G** into both board **H** creating the walls of the bottom box (G+H+G+H). Keeping the marked sides on the inside.

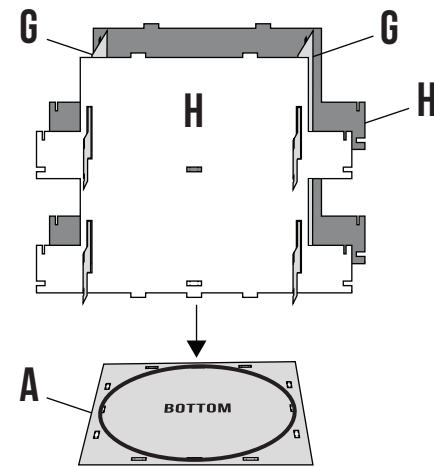


STEP 2: Connect the bottom wall (G+H+G+H) to the bottom board **A**.

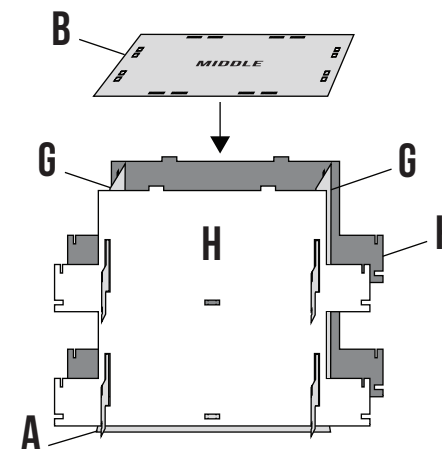


STEP 3: Connect the middle board **B** to the bottom wall (G+H+G+H) at the top.

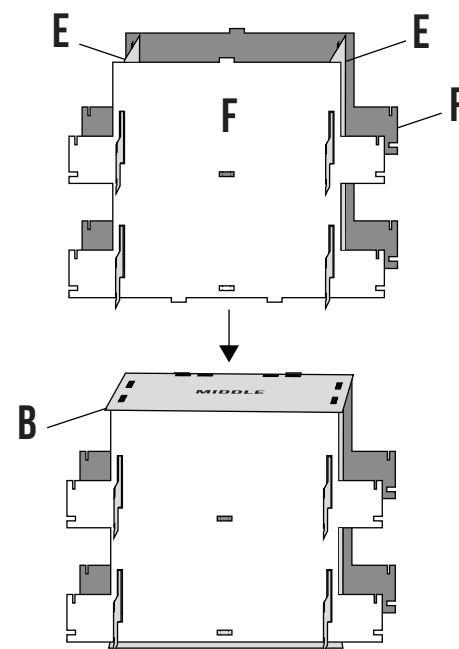


STEP 4: Fit both board **E** into both board **F** creating the walls (E+F+E+F) to connect to the middle board **B**.

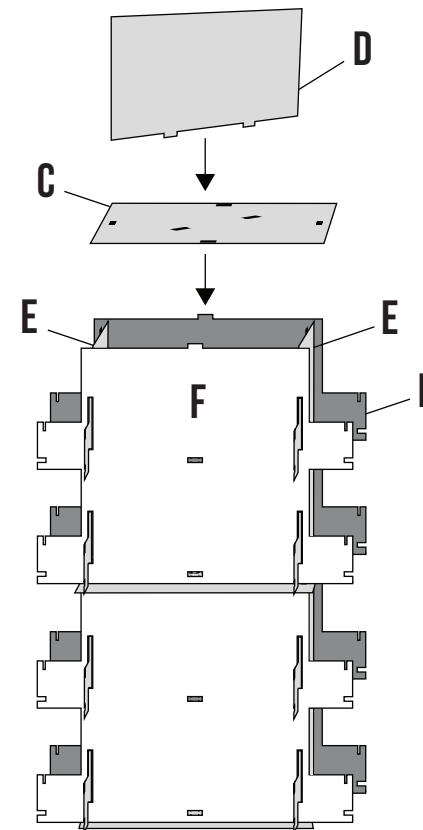


STEP 5: Connect the top board **C** to the top wall (E+F+E+F) and attached board **D** on top.

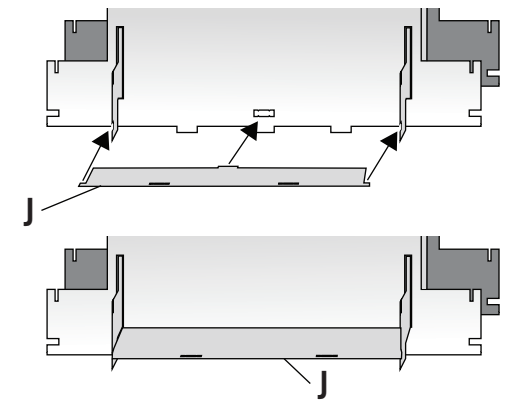

STEP 6: Fit all shelf board **J** into the walls both bottom and top.

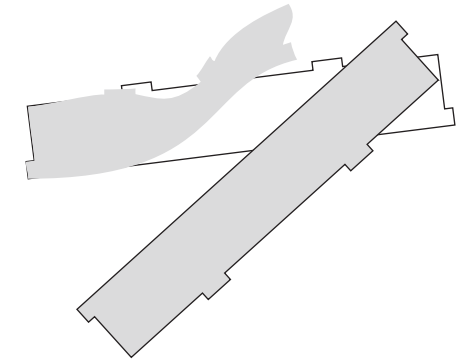

STEP 7: Remove the film from both sides of the clear boards **I**. TIP: Rubbing 2 of the films against each other will help lift the films.

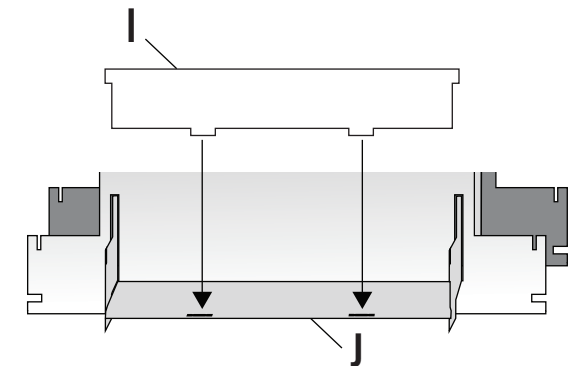

STEP 8: Fit all clear boards **I** into the walls and **J** boards.

DIS-AD-R-C-STK-4



SCAN QR CODE TO WATCH ASSEMBLY VIDEO OR GO TO [TORCHEDDISPLAYS.COM/VIDEOS](https://torcheddisplays.com/videos)