


ATTENTION: these fittings are designed to engage each other with minimal effort. You will never need any other tools to build your display. DO NOT force pieces. If a piece is broken, please contact us for replacement.



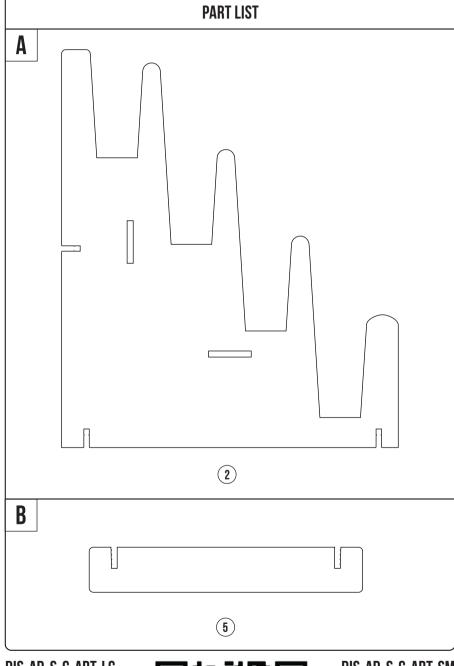





DIS-AD-S-C-ART-SM

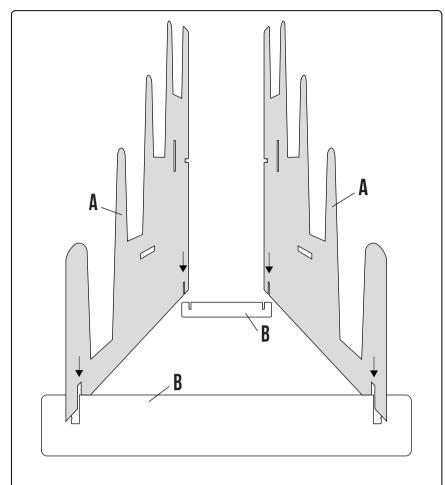

STEP 1: Insert 2 **B** boards into the bottom grooves of boards A.

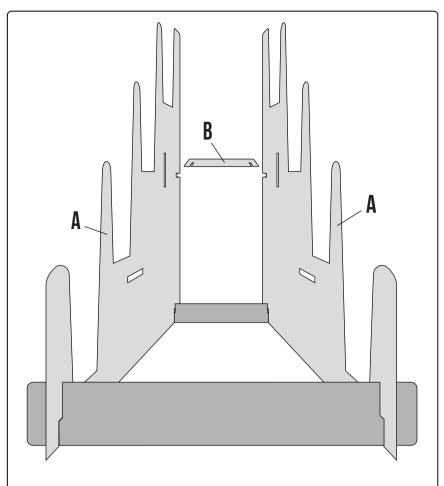

STEP 2: Insert a board B into the back of boards A.

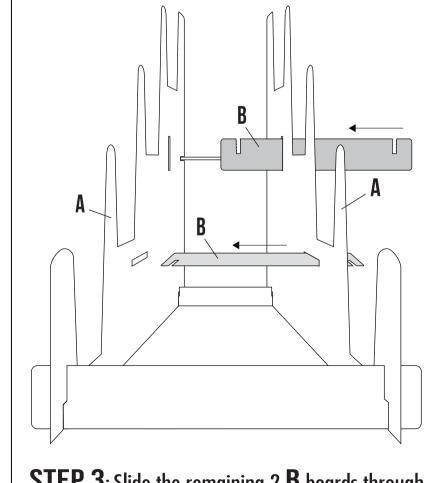

STEP 3: Slide the remaining 2 **B** boards through the grooves in the **A** boards from the outside.

